

ADD-A-BATHROOM

Silicone Application Guide

Add-A-Bathroom Pty Ltd

34 Gum Avenue, Dry Creek. S.A. 5094

Phone: 1300 559 121

Facsimile: 08 8260 2699

email: info@addabathroom.com.au

Web: www.addabathroom.com.au

1. Carry all panels into the installation area. Check that all panels, bolts and silicone along with the correct tools are easily to hand. Place the floor panel in a cleared area so as to allow enough room to get access to all sides of the module. The first wall panel to connect will be one of the end wall panels, either end panel is OK.
2. Onto the flange of the floor section at one end, place a small bead (4 to 5 mm in diameter) of the silicone along the rear edge of the flange, behind the bolt holes. Ensure that the bead continues just past where the end wall panel will stop. Place the end wall onto the floor flange, being careful to line up the bolt holes. Place the bolts, washers (2 are supplied for each bolt) and nuts into the holes. Take up all the slack on the bolts but do not do the bolts up tight just yet, look inside the unit to best line up the join between the floor section and the end wall. Lightly tap the end wall in or out to line up.
3. In the following order repeat this process with the remaining panels,
bottom rear wall panel, top rear wall panel, other end wall panel, large front wall panel, small front wall panel, ceiling panel.
4. At this point make sure you have allowed for the correct door opening width (tolerance is 700 mm to 705 mm).
5. Tighten all bolts (be carefully not to over tighten the bolts, just nicely firm is adequate) and ensure no silicone has squeezed out the joins on the inside of the bathroom. If some has, gently clean this off without smearing it over the panel. **Do Not** use the Smoothfix at this point.
6. Now it is ready to put the final silicone bead to the inside of the joins.

NB: silicone will not adhere to surfaces that have had the Smoothfix solution applied.

Apply only as much silicone as can be worked before skin forms - up to 10 mins, depending on temperature.


7. Cut the plastic nozzle at 45 deg, attach to the tube and place tube in gun.
It is best to trail silicone behind nozzle to fill joint completely but do not overfill as this can make cleaning up difficult. It is important to make sure you are forcing the silicone firmly into the joint. Start with the joint of the floor to the walls, at this time also put silicone approximately 150 mm up the vertical joints. After you have made sure there are no gaps in the bead you have just applied liberally spray or lightly brush the Smoothfix solution over the silicone bead and over each side of the joint to about 50 mm wide.

Do not spray the vertical joints at this time.

Using the rubber applicator as shown in the diagram, smooth off any excess silicone.

Then build up vertical joints with silicone from bottom, working up. When applying the Smoothfix to the vertical joints do not allow any over spray to go onto the ceiling/wall joints. Apply silicone to ceiling joint last. Use the flat end of the applicator to clean up any silicone left next to the joints. It is OK to spray more Smoothfix on after the first cleanup if you need to run the applicator over the joint a second time, this allows for a better slip of the tool and a smoother finish.

Allow the correct drying time as per the instructions on the tube.

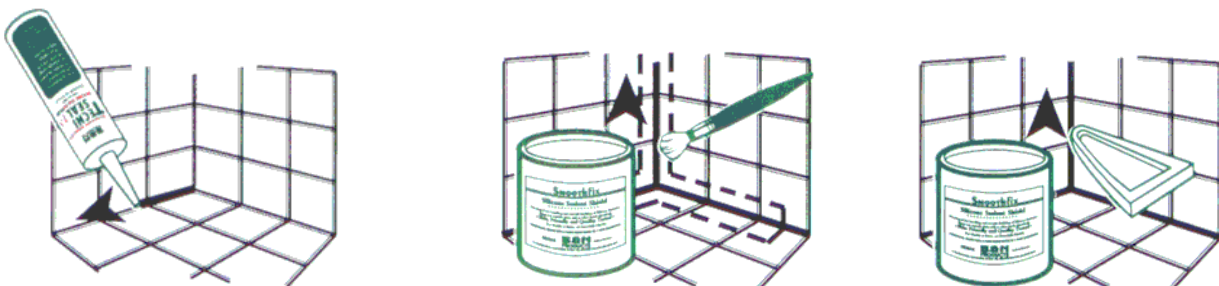

Please note that this guide is provided for general information purposes only and should not be relied upon without professional advice about your personal situation and installation requirements. As this guide does not take your personal circumstances into account and as any installation is beyond the control of Add-A-Bathroom Pty Ltd, no responsibility is accepted nor warranty implied by Add-A-Bathroom Pty Ltd by the publishing or use of this guide. The MSDS for this product is available on request from Add-A-Bathroom Pty Ltd, or the manufacturer.